## IMPORTANT SAFETY INSTRUCTIONS

**HOUSEHOLD USE ONLY** 

## **A WARNING**

### TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

### READ ALL THESE INSTRUCTIONS BEFORE USE.

- 1. Unplug or disconnect the appliance from the power supply before servicing.
- DO NOT operate any unit with a damaged cord or plug. Consult your local waste authority for information regarding available recycling and/or disposal options.
- DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings.
   DO NOT route cord under furniture or appliances.
   Keep cord away from high-traffic areas where it will not be tripped over.
- **4.** If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- **5.** This appliance should only be placed on flat and dry surfaces.
- **6.** This appliance is not intended for use by anyone (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they DO NOT play with the appliance.
- **8.** Cleaning and user maintenance shall not be made by children without supervision.
- **9.** Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
- **10. DO NOT** handle plug or appliance with wet hands.
- 11. DO NOT use without filter in place.
- **12.** Only use Shark® branded filters and accessories.
- 13. DO NOT damage the power cord:
  - a) **DO NOT** pull or carry appliance by the cord or use the cord as a handle.
  - b) DO NOT unplug by pulling on cord. Grasp the plug, not the cord.
  - c) **DO NOT** stand the appliance on the power cord, close a door on the cord, pull the cord around sharp corners, or leave the cord near heated surfaces.
- **14. DO NOT** use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- **15. DO NOT** use if airflow is restricted. If the air paths become blocked, turn the appliance off and unplug from electrical outlet. Remove all obstructions before you plug in and turn on the unit again.
- **16. DO NOT** use if appliance is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
- **17. DO NOT** place appliance on unstable surfaces such as chairs or tables.
- **18. DO NOT** use in the following areas:
  - a) Wet or damp surfaces
  - b) Outdoor areas
  - c) Spaces that are enclosed and may contain explosive or toxic fumes or vapors (lighter fluid, gasoline, kerosene, paint, paint thinners, mothproofing substances, or flammable dust)
- **19.** Turn off all controls before plugging in or unplugging the appliance.
- **20.** Unplug from electrical outlet when not in use and before any maintenance or cleaning.
- **21.** Hand wash exterior/hard plastic/non-electronic parts with water only. **DO NOT** immerse. Cleaning with chemicals could damage the unit.

**22.** Make sure filter is in place after routine maintenance.

#### **ANTI-ODOUR TECHNOLOGY**

- **23.** Observe the following when interacting with the Anti-Odour Technology cartridge.
  - a) DO NOT attempt to disassemble Anti-Odour Technology cartridge.
  - b) Avoid direct contact with the fragrance pod in the cartridge.
  - c) **DO NOT** directly inhale from the Anti-Odour Technology cartridge.
  - d) Keep away from children and pets.
  - e) Keep away from heat, sparks, and open flame.
  - f) **DO NOT** place in direct sunlight.

#### FRAGRANCE CARTRIDGE FIRST AID

- a) Avoid contact with fabrics and finished surfaces.
- b) Eye contact: Remove contact lenses if present. Rinse continuously with water for several minutes
- Skin contact: Wash hands thoroughly after handling. If irritation or rash develops, seek medical advice/attention.
- d) Inhalation: Move person to fresh air if they are experiencing any respiratory symptoms. If symptoms persist, seek medical advice/attention.
- e) Ingestion: **DO NOT** induce vomiting. Seek medical advice/attention.
- **24.** Dispose of batteries properly. Keep batteries away from children at all times. Even used batteries can cause injury.

# WARNING: Chemical Burn Hazard. Keep batteries away from children.

This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. When not changing batteries, keep the battery compartment completely closed. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

# READ AND SAVE THESE INSTRUCTIONS

visit QR.SHARKCLEAN.COM/HP300UK or

# SCAN HERE USING YOUR SMARTPHONE CAMERA



FOR FULL INSTRUCTIONS OR TO PURCHASE ACCESSORIES.

# **QUICK START GUIDE**

### SETTING UP YOUR AIR PURIFIER



1. DO NOT plug in the air purifier. First, carefully turn the air purifier upside down and place it on a level, floor surface. Rotate the filter door counter clockwise to the unlocked position to access the HEPA filter.



2. Take the HEPA filter out of its plastic packaging. Reinstall the HEPA filter in either orientation.



3. With the HEPA filter reinstalled, twist the filter door clockwise until it clicks into place.



4 Set up the air purifier on a flat, level, floor surface, at least 8cm (3 inches) away from walls and objects.

If included with your HP300 series air purifier, locate the Anti-Odour Technology cartridge and follow the instructions for how to insert the product.



5. Carefully remove the yellow sticker on the top of the product to access the control panel.

Plug the air purifier into an electrical outlet and press the power button on the top control panel.



6. When the air purifier power is on, it will begin to analyse the air quality, indicated by the rotating lights.

After a few seconds, the air purifier will display the current air purification status. See below for more information.

### **UNDERSTANDING YOUR AIR QUALITY**

On the front display, the colour of the ring tells you about your air quality.



### TRY THESE TIPS TO ENSURE **CLEAN AIR CONFIDENCE.**

- Run on Auto Mode—Fan speeds will adjust automatically. As air quality decreases, the fan speed will increase.
- Optimise Performance in Eco Mode-After 100% air purification status is achieved for 5 minutes in Auto Mode, your air purifier will enter Eco Mode.
- Maintain Mesh Dust Filters—When you see the red pulsing ring on the front display, check and clean both mesh dust filters to help keep your air purifier working optimally for longer.

### FOR MORE INFORMATION:

visit QR.SHARKCLEAN.COM/HP300UK or

**USING YOUR SMAR** 



FOR FULL INSTRUCTIONS OR TO PURCHASE ACCESSORIES.





