


Please make sure to read the enclosed Ninja® Owner's Guide prior to using your unit.


# NINJA®

## PROFESSIONAL TOUCHSCREEN BLENDER QUICK ASSEMBLY


### TOTAL CRUSHING® PITCHER

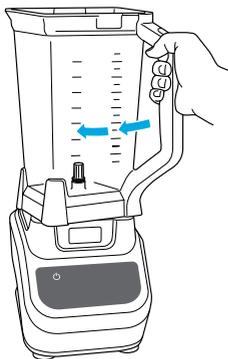

1. Place pitcher on base and turn clockwise to lock in place.

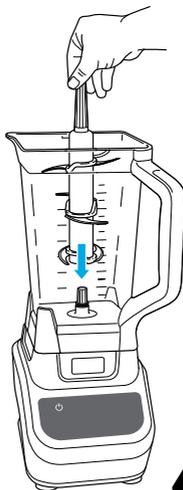

2. Holding the Stacked Blade Assembly by the top of the shaft, insert it into the pitcher.

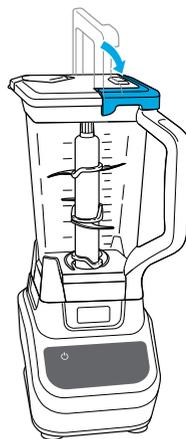

3. Align arrows on lid and handle, then lower handle to lock in place.

### INTUITIVE TOUCHSCREEN TIPS



The intuitive touchscreen makes selecting a program easier than ever. Simply switch between pre-set programs and manual controls by pressing the AUTO-iQ/MANUAL Mode button.



**WARNING:** Stacked Blade Assembly is sharp and not locked in place. Make sure lid is locked onto pitcher before pouring contents. If pouring without lid, carefully remove blade assembly first. Failure to do so will result in a risk of laceration. Refer to the Ninja Owner's Guide for additional information.

**QUESTIONS?** We're here to help. Call **1-877-646-5288** or visit **ninjakitchen.com**

Please make sure to read the enclosed Ninja® Owner's Guide prior to using your unit.

# NINJA

## PROFESSIONAL TOUCHSCREEN BLENDER QUICK ASSEMBLY

### INTUITIVE TOUCHSCREEN PROGRAMS

#### HOW THE INTUITIVE TOUCHSCREEN WORKS

The Mode toggle button will always default to the AUTO-iQ Mode. For MANUAL Mode, press AUTO-iQ/MANUAL a second time and MANUAL will illuminate.

##### AUTO-iQ PROGRAMS:

Intelligent pre-set programs combine unique blending and pausing patterns that do the work for you.

##### MANUAL CONTROLS:

PULSE, LOW, and HIGH run continuously until turned off, to give you ultimate control.

#### SMOOTHIE

Fresh/Frozen Fruits  
Milks/Yogurts  
Protein Shakes

#### FROZEN DRINK

Margaritas  
Daiquiris  
Milkshakes

#### PUREE

Sauces  
Dips

#### PULSE

#### LOW

#### HIGH

### CLEANING

**Dishwasher:** Container, lid, and Stacked Blade Assembly are all top-rack dishwasher safe. Ensure the blade assembly is removed from the container before placing in the dishwasher.

**Hand-washing:** Wash container, lid, and Stacked Blade Assembly in warm, soapy water. When washing the blade assembly, use a dishwashing utensil with a handle to avoid direct hand contact with blades. Handle blade assembly with care to avoid contact with sharp edges. Rinse and air-dry thoroughly.

**Touchscreen:** To clean the touchscreen, unplug the unit and always use a soft material to avoid scratching. To remove residue from the screen, you may use an all-purpose cleaner.



**WARNING:** Handle the Stacked Blade Assembly with care when washing, as the blades are sharp. Contact with the blades' edges can result in laceration.

**QUESTIONS?** We're here to help. Call 1-877-646-5288 or visit [ninjakitchen.com](http://ninjakitchen.com)