SHARK POWERDETECT QUICK START GUIDE SETTINGS



- Touchscreen Selector: To switch between modes, gently tap the desired mode icon.
- Detect Mode: Select Detect mode to activate Smart Detect Technology. In this mode, the vacuum will detect floor type, dirt, and edges, and will automatically adjust suction to maximize cleaning performance.
- Manual Surface Modes: Select one of the manual surface modes (Hard Floor, Carpet, or Thick Carpet) to clean specific surfaces without Smart Detect Technology.

SMART DETECT TECHNOLOGY SUITE




FLOORDETECTTM Identifies **surface type** and adjusts brushroll speed and suction for optimized cleaning.







EDGEDETECT Focuses and maximizes suction along corners and edges to target

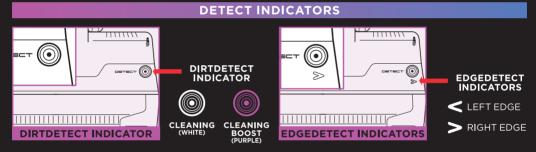

SENSOR CLEANING

Clean the sensors when the DIRTDETECT icon turns red. If the sensors are partially obstructed, Detect mode will not function as expected. If the icon is still red after cleaning, refer to Detect Sensor Maintenance in the Owner's Guide.







DIRTDETECT SENSOR

TO CLEAN THE SENSORS:

- 1. Turn off power and remove the floor nozzle.
- 2. Locate the DirtDetect sensor in the nozzle (Fig. 1), the FloorDetect sensor on the bottom of the nozzle (Fig. 2), and the EdgeDetect sensors on both sides of the nozzle (Fig. 3).

CLEANING THE DETECT SENSORS



CLEANING THE FLOORDETECT SENSOR EDGEDETECT SENSORS 3. Gently wipe the sensors with a microfiber

 \cap

- cloth and remove all hair and debris.
- 4. Reattach the floor nozzle to the rest of the unit and turn on power. Verify the unit is functioning normally.

©2024 SharkNinja Operating LLC. SHARK is a registered trademark in the United Kingdom of SharkNinja LLC FLOOR DETECT and POWERDETECT are pending trademarks in the United Kingdom of SharkNinja LLC