

MANUFACTURER’S GUARANTEE

The Shark representative will go through some troubleshooting with you, and if we conclude that the item has failed, we will send you a replacement part or a returns label to send the defective item back to us free of charge. When you have delivered the defective product to us, we will send you a replacement.

Please remember that the item will need to be boxed when you return it to us, which can be any suitable box; it does not have to be the original packaging.

Where can I buy genuine Shark spares and accessories?

Shark spares and accessories are developed by the same engineers who developed your Shark Fan appliance. You’ll find a full range of Shark spares, replacement parts and accessories for all Shark machines at sharkclean.co.uk. Please remember that damage caused by the use of non-Shark spares may not be covered under your guarantee.

IMPORTANT INFORMATION

REGISTER YOUR PURCHASE

sharkclean.uk/register-guarantee
Scan QR code using mobile device.



TIP:

You can find the model and serial numbers on the QR code located on the back of your unit.

RECORD THIS INFORMATION

Model Number:

Serial Number:

Date of Purchase (Keep receipt):

Store of Purchase:

TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz / 3A
Watts: 36W

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

This Instruction Guide is designed to help you get a complete understanding of your new Shark® Fan.

SharkNinja Europe Ltd,
1st/2nd Floor Building 3150,
Thorpe Park, Century Way,
Leeds, England, LS15 8ZB
sharkclean.co.uk

SharkNinja Germany GmbH,
Rotfeder-Ring 9,
60327 Frankfurt am Main,
Germany
sharkclean.eu

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

© 2025 SharkNinja Operating LLC. SHARK is a registered trademark in the United Kingdom of SharkNinja Operating LLC.

FA050UK_Series_QSG_MP_Mv1_250314



@sharkhomeUK

IMPORTANT SAFETY INSTRUCTIONS

SUITABLE FOR OUTDOOR USE. SUITABLE FOR HOUSEHOLD USE ONLY.



NOTE: After every use, empty the water tank and let it dry completely to prevent stagnant water from being misted.

⚠ WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY: READ ALL THESE INSTRUCTIONS BEFORE USE.

Note: this is not a humidifier.

1. This appliance is operated by a rechargeable battery. **ONLY** recharge the battery with the charger supplied with the unit, battery charger for use only with model GQ36-120300-ABO power supply from Dongguan Gangqi Electronics Co Ltd, or with model AJJ3-1 from Anlian. A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
2. **DO NOT** attempt to destroy, remove, or disassemble the battery pack from the machine. **DO NOT** incinerate battery cells. Consult your local waste authority for information regarding available recycling and/or disposal options.
3. To reduce the risk of an electric shock, connect only to an outlet provided with a Residual Current Device (RCD).
4. The fan should be used on a stable and level surface.
5. Never use this fan near pools, bathtubs, showers, basins, or other vessels containing water.
6. **DO NOT** operate any unit with a damaged power supply wire or battery charger. Discard the unit or return to an authorized service facility for examination and/or repair.
7. **DO NOT** run cord under carpeting. **DO NOT** cover charge cord with throw rugs, runners, or similar coverings. **DO NOT** route charger cord under furniture or appliances. Keep charger cord away from high-traffic areas. Place charger in an area where the cord will not be tripped over.
8. If the charger cord is damaged, it should be replaced.
9. This appliance is not intended for use by anyone (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
10. Children should be supervised to ensure that they **DO NOT** play with the appliance.
11. Cleaning and user maintenance shall not be made by children without supervision.
12. Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
13. Only use Shark branded accessories.
14. **DO NOT** use if appliance is not working as it should, has been damaged, or dropped into water.
15. Turn off all controls before plugging in or unplugging the appliance.
16. Unplug from electrical outlet when not in use and before any maintenance or cleaning.
17. Hand wash exterior/hard plastic/non-electronic parts with a damp cloth and water only. **DO NOT** immerse. Cleaning with chemicals could damage the unit.
18. **DO NOT** attempt to repair or adjust any electrical or mechanical functions of this appliance, as this may cause danger and void the warranty.

19. **DO NOT** force discharge, recharge, disassemble, heat above 60°C (140°F), or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
20. The misting feature is suitable for indoor and outdoor use. This product is **NOT** a humidifier.
21. Never attempt to mist substances other than filtered or clean tap water. **DO NOT** use, warm, or hot water. Only use cold or room temperature water.
22. **DO NOT** handle live electrical products while in range of the misting stream.
23. Keep non-waterproof electronic equipment and appliances out of the misting stream.
24. To avoid accidental damage or injury **DO NOT** touch the metal misting plate while the unit is on.
25. **DO NOT** attempt to operate the misting feature with an empty water tank. The metal misting plate may reach high temperatures if operated without water.
26. **WARNING: CHOKING HAZARD.** Always keep nozzles and any other small parts out of the reach of children.
27. **DO NOT** use any scented products (fragrances, oils, etc.) in the water tank or on any part of the fan.

⚠ WARNING: Not suitable for use with mains-powered variable speed controls.

LITHIUM BATTERY SAFETY WARNINGS ⚠ ⚠

LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED.

1. **DO NOT** DO ANY OF THE FOLLOWING TO THE BATTERY PACK:
 - a. Open
 - b. Drop
 - c. Short-circuit
 - d. Puncture
 - e. Incinerate
 - f. Expose to temperatures below 0°C and above 60°C
2. Keep battery pack dry.
3. Charge battery pack only according to its charger's instructions.
4. Inspect battery pack before every use: do not use or charge if damaged.

BATTERY REMOVAL AND DISPOSAL

This product contains an integral lithium battery (not replaceable).

DO NOT incinerate or compost the product with its integral battery.

In some areas, it is illegal to place spent lithium batteries in the rubbish or in a municipal solid waste stream. Return product with spent battery to an authorised recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent product..

POWER SUPPLY SAFETY

1. Read and follow all instructions that are on the product or provided with the product.
2. **DO NOT** use an extension cord.
3. **DO NOT** use within 3 metres of pool or other bodies of water and do not use in a bathroom.
4. **WARNING:** Risk of Electric Shock. When used outdoors, install only to a covered Class A RCD protected receptacle that is weatherproof with the power unit connected to the receptacle.

READ AND SAVE THESE INSTRUCTIONS

Please be sure to read and save the warnings on other side prior to using your unit.

QUICK START GUIDE

WHAT'S INCLUDED

Includes:

- Fan
- Charger



Charger
(Reference image only)



Fan
(Already assembled)

FOR MORE INFORMATION

visit qr.sharkclean.com/FA050UK or
SCAN HERE
USING YOUR
SMARTPHONE CAMERA



FOR FULL INSTRUCTIONS
OR TO PURCHASE ACCESSORIES.

FEATURES

CORDLESS

This is a 2-in-1 fan that can be used with or without the cord.

OUTDOORS

This fan can be enjoyed indoors or outdoors.
DO NOT CHARGE OR USE IN THE RAIN.

VERTICAL TILT

Direct the airflow by manually adjusting the vertical tilt up to 45 degrees.

NATURALBREEZE

Activate gentle/strong NaturalBreeze modes to simulate natural wind conditions.


MISTING

Integrated misting suitable for both indoor and outdoor usage.

HOW TO USE YOUR FAN


Fan Speed







Press  on the fan head to cycle between fan settings:
Fan speeds 1-5 | NaturalBreeze modes
LED lights will indicate selected fan setting. See the Owner's Guide for more details.

Power




Press  on the fan head to turn the fan on. The battery LED will indicate how much power your fan has. See below for details.

-  70%-100%: green light
-  30%-69%: amber light
-  6%-29%: red light steady
-  5% and below: red light blinking

Misting Modes



Press  on the fan head to cycle between mist settings: consistent | interval | OFF
LED lights will indicate selected mist setting. See the Owner's Guide for more details.
Tip: Try adjusting the fan speed while misting to customise your cooling experience.

Approximate Fan ONLY Runtime

MAXIMUM CORDLESS RUNTIME: 12 hours on fan speed 1.
AVERAGE CORDLESS RUNTIME: 3.5 hours on fan speed 3.
MAXIMUM CORDLESS PERFORMANCE: 1 hour on fan speed 5.
PLUGGED IN: Indefinite runtime; fan will charge while operating.

Approximate Fan + Mist Runtime

MAXIMUM MISTING RUNTIME: Up to 60 minutes of Interval misting per tank at any fan speed.
MAXIMUM MISTING PERFORMANCE: Up to 30 minutes of Consistent misting per tank at any fan speed.
Note: The mister will automatically turn off after 1 hour in Consistent mode or 2 hours in Interval mode. This prevents dry running and system damage. See Owner's Guide for more information.

Charge Time

FROM 0% TO FULLY CHARGED BATTERY: Approximately 3 hours

HOW TO DRY YOUR FAN

- First, empty all the water out of the tank: Hold the fan over a drain, open the water tank cap, then turn the fan upside down and allow all water to drain out.
- Place the fan upright on a level, stable surface. Open the misting cap on the front grill of the fan, then turn on the misting function for 5 seconds to clear any remaining water from the system.
- Place the fan in a well-ventilated space and allow it to air-dry completely.

NOTE: Leave the water fill port open for 24 hours before closing and storing the unit.



VERTICAL TILT

Fan head tilted UP




Fan head tilted DOWN



HOW TO CHARGE YOUR FAN

To charge the fan, insert the charger into the charging port on the back of the fan head. **DO NOT CHARGE OR USE IN THE RAIN.**

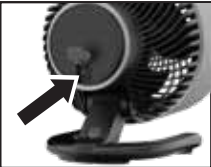

MANUFACTURER'S GUARANTEE

When a consumer buys a product in the United Kingdom, they get the benefit of legal rights relating to the quality of the product (your “legal rights”). You can enforce your legal rights against your retailer, including Shark if you bought your Shark appliance from sharkclean.co.uk. However, at Shark we are so confident about the quality of our products that we give the owner an additional, free parts and labour manufacturer's guarantee of up to 2 years.

A household appliance like a Shark Fan appliance constitutes a sizeable investment. Your new machine needs to work properly for as long as possible. The guarantee it comes with is an important consideration - and reflects how much confidence the manufacturer has in its product and manufacturing quality.

The manufacturer's guarantee does not affect your legal rights.

How long are new Shark machines guaranteed for?

Our manufacturer's guarantee lasts for one year from the date of purchase as standard, or for two years if you register your purchase with us within 28 days. There is information on how to register below.

How do I register my Shark guarantee?

If you have purchased your Shark Fan appliance directly from sharkclean.co.uk your guarantee is registered automatically. If you bought it from anywhere else, you can register your guarantee online within 28 days of purchase.

- To register online, please visit sharkclean.co.uk/register-guarantee or scan the QR code in your instruction manual.
- Keep a note of the date you purchased the machine.

IMPORTANT:

- Keep your receipt** if you bought your Shark Fan appliance from anywhere except sharkclean.co.uk. You will need it to claim under your guarantee.
- The free Shark guarantee only applies in the UK.

What are the benefits of registering my free Shark guarantee?

When you register your guarantee, you will get an extra year of cover. We'll also have your details to hand if we ever need to get in touch. If you further agree to receive communications from us, you can also receive tips and advice on how to get the best out of your Shark Fan appliance and hear the latest news about new Shark technology and launches.

What is covered by the free Shark guarantee?

Repair or replacement (at Shark's option) of your Shark machine, including all parts and labour.

What is not covered by the free Shark guarantee?

- Normal wear and tear.
- Accidental damage or faults caused by negligent use or care, misuse, neglect, careless operation or handling of the Shark appliance which is not in accordance with the Shark Operating Manual supplied with your machine.
- Damage caused by use of the Shark appliance for anything other than normal domestic household purposes.
- Damage caused by use of parts not assembled or installed in accordance with the operating instructions.
- Damage caused by use of parts and accessories which are not Shark Genuine Components.
- Faulty installation (except where installed by Shark).
- Repairs or alterations carried out by parties other than Shark or its agents.

How can I claim under the free Shark guarantee?

Contact our customer service helpline on 0800 862 0453. For service hours please visit our website under 'Contact Us'. It's free to call, and you'll be put straight through to a Shark representative. You'll also find online support at support.sharkclean.co.uk/.

After every use, empty the water tank and let it dry completely to prevent stagnant water from being misted.