

Shark

FAN

TF200SUK Series

OWNER'S GUIDE



Actual unit may vary slightly in appearance and colour.

IMPORTANT SAFETY INSTRUCTIONS

SUITABLE FOR HOUSEHOLD USE ONLY.

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY: READ ALL THESE INSTRUCTIONS BEFORE USE.

- 1.** Do not incinerate battery cells. Consult your local waste authority for information regarding available recycling and/or disposal options.
- 2.** This appliance comes with a remote control that contains (2) AAA batteries. Dispose of batteries properly. Always keep batteries away from children (choke hazard). Even used batteries can cause injury.
- 3.** To reduce the risk of an electric shock, connect only to an outlet provided with a Residual Current Device (RCD).
- 4.** The fan should be used on a stable and level surface.
- 5.** Never use this fan near pools, bathtubs, showers, basins, or other vessels containing water.
- 6.** Do not operate any unit with a damaged wire. Discard the unit or return to an authorized service facility for examination and/or repair.
- 7.** Do not run cord under carpeting. Do not cover charge cord with throw rugs, runners, or similar coverings. Do not route charger cord under furniture or appliances. Keep charger cord away from high-traffic areas. Place charger in an area where the cord will not be tripped over.
- 8.** If the charger cord is damaged, it should be replaced.
- 9.** This appliance is not intended for use by anyone (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 10.** Children should be supervised to ensure that they **DO NOT** play with the appliance.
- 11.** Cleaning and user maintenance shall not be made by children without supervision.
- 12.** Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
- 13.** Only use Shark® branded accessories.
- 14.** Do not use if appliance is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
- 15.** Turn off all controls before plugging in or unplugging the appliance.
- 16.** Unplug from electrical outlet when not in use and before any maintenance or cleaning.
- 17.** Hand wash exterior/hard plastic/non-electronic parts with water only. Do not immerse. Cleaning with chemicals could damage the unit.
- 18.** Do not attempt to repair or adjust any electrical or mechanical functions of this appliance, as this may cause danger and void the warranty.
- 19.** Even used batteries may cause severe injury or death.
- 20.** Call a local poison control center for treatment information.
- 21.** Compatible battery type is AAA.
- 22.** The nominal battery voltage is 3V.
- 23.** Non-rechargeable batteries are not to be recharged.
- 24.** Do not force discharge, recharge, disassemble, heat above 60°C, or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
- 25.** Ensure the batteries are installed correctly according to polarity (+ and -).
- 26.** Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.

- 27.** Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.

- 28.** Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.



WARNING: Not suitable for use with solid-state speed controls.

BATTERY REMOVAL AND DISPOSAL

This remote control uses 2 AAA batteries. When the remote batteries no longer have a charge, they should be removed from the remote and recycled. **DO NOT** incinerate or compost the product with its integral battery or the remote batteries. When your remote batteries need to be replaced, dispose of them or recycle them in accordance with local ordinances or regulations. In some areas, it is illegal to place spent batteries in the trash or in a municipal solid waste stream. Return spent batteries to an authorised recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent batteries.

POWER SUPPLY SAFETY

- 1.** Read and follow all instructions that are on the product or provided with the product.
- 2.** Do not use an extension cord.
- 3.** Do not use within 3 metres of a pool or other bodies of water and do not use in a bathroom.

READ AND SAVE THESE INSTRUCTIONS

SHARK TF200SUK SERIES PRODUCT INFORMATION

According to:

Commission Regulation (EU) 206/2012 implementing Directive 2009/125/EC of the European Parliament and of the Council with regard to eco-design requirements for air conditioners and comfort fans.

 
NOTE	DESCRIPTION	SYMBOL	VALUE	UNIT
	Maximum Flow Rate	F	43.42	m ³ /min
	Fan Power Input	P	90	W
	Service Value	SV	0.51	(m ³ /min)/W
	Standby Power Consumption	P _{SB}	0.27	W
Horizontal	Fan Sound Power Level	L _{wa}	62.2	dB(A)
Vertical	Fan Sound Power Level	L _{wa}	62.2	dB(A)
	Maximum Air Velocity	c	2.3	m/s
	Measurement standard for service value	IEC 60879		

Please be sure to read and save the warnings on other side prior to using your unit.

QUICK START GUIDE

SETTING UP YOUR FAN

Includes:

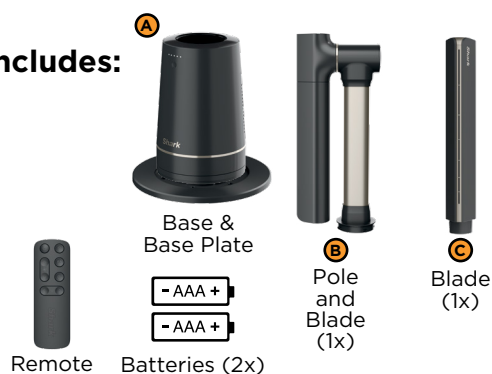

1. Remove base from packaging. Place on an even surface.



2. Use assembly stickers to align the red arrow printed on the **Pole** with the red arrow printed on the **Base**. Twist the **Pole** clockwise to lock it into the **Base**. Remove tape after assembly has been completed.



3. Remove tape and cardboard from **Pole**. Line up the printed red circle on the **Blade** with the red circle on the inner **Pole**. Press the **Blade** firmly into the **Pole** until it clicks into place. Remove all assembly tape on **Base** and **Pole**.

FEATURES



PIVOT: Manually adjust the fan blade left or right to increase horizontal coverage.



TILT: Manually rotate the blades to increase horizontal coverage.



TELESCOPE: Manually adjust the height of the fan up or down.



Magnetically store **REMOTE** on back of the fan.



DUST DEFENCE panel protects the interior of the unit.

CUSTOMISABILITY

	Power On <i>Press button on base or remote</i>	Press to turn the unit on or off.
	Fan Speeds <i>Press and hold button on base or press on remote</i>	Press the fan icon on the remote or hold down the power button on the unit to switch between fan speeds 1-10. LED lights will indicate selected fan speed.
	Specialty Modes <i>Remote only</i>	Setting 1: Sleep Mode. For 8 hours the fan will adjust to the best setting for ambient noise, whilst dimming lights and muting chimes. Setting 2: BreezeBoost Mode. Fan will create high speed airflow above speed setting 10. Setting 3: NaturalBreeze Mode. Fan will create varying airflow patterns to simulate natural wind. Setting 4: Off.
	Oscillation <i>Remote only</i>	 Setting 1: 45 degrees Setting 2: 90 degrees Setting 3: 180 degrees Press the oscillation icon on the remote to toggle oscillation. LED lights will change when oscillation has been selected. ⚠️ If you'd like to oscillate the unit when it is horizontal, make sure to place it in a location where it will not hit any walls or objects.
	Timer <i>Remote only</i>	 Setting 1: 1 Hour Setting 2: 2 Hours Setting 3: 4 Hours Setting 4: 8 Hours Setting 5: 12 Hours Press the timer icon on the remote to switch between timer settings of 1-12 hours. LED lights will indicate how many hours the timer is set for. LEDs will switch off after 20 seconds. To check how long is left on the timer, press the timer icon and LED lights will appear.
	Horizontal Angle Adjust <i>Remote only</i>	Press the angle adjust arrows on the remote to change the horizontal angle of the fan from a distance.

TO DISABLE CHIME: Hold down the timer and oscillation buttons on the remote at the same time for 3 seconds to disable chiming. Repeat to re-enable.

 
 
CARRYING POSITION: Recommended carrying position is to use the handle on the base while simultaneously supporting the pole.



REMOTE


- Before first use, insert 2 AAA batteries.
- To replace the battery in the remote, use 2 AAA batteries. See "MAINTENANCE" for battery replacement instructions.

IF YOU PURCHASE A REPLACEMENT REMOTE: you must pair the remote to the unit. To do this, press power on the unit for 5 seconds when in standby mode. Then press the fan speed up arrow on the remote.

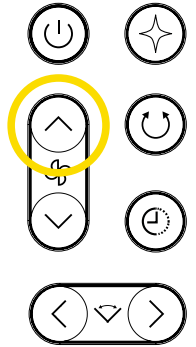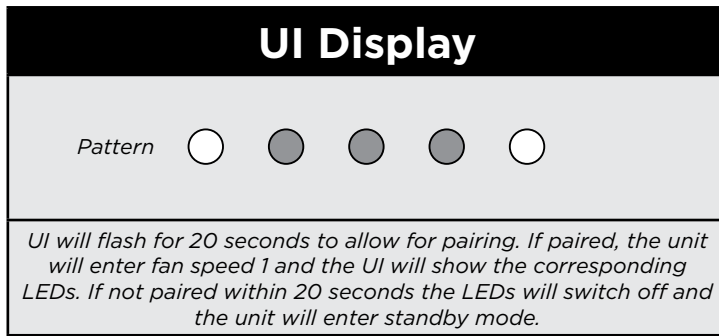

FAN SPEEDS

UI Display	
Speed 1 ○ ● ● ● ●	Speed 6 > ○ ○ ○ ○ ○ < + ○ ● ● ● ●
Speed 2 ○ ○ ● ● ●	Speed 7 > ○ ○ ○ ○ ○ < + ○ ○ ● ● ●
Speed 3 ○ ○ ○ ● ●	Speed 8 > ○ ○ ○ ○ ○ < + ○ ○ ○ ● ●
Speed 4 ○ ○ ○ ○ ●	Speed 9 > ○ ○ ○ ○ ○ < + ○ ○ ○ ○ ●
Speed 5 ○ ○ ○ ○ ○	Speed 10 > ○ ○ ○ ○ ○ < + ○ ○ ○ ○ ○
<i>When fan speed is selected, the lights will display the correct speed. For speeds 6-10, all 5 lights will flash before displaying additional lights to show the current speed.</i>	

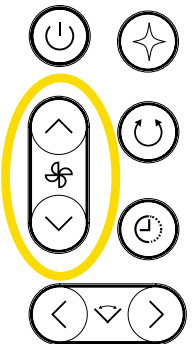 

Changing the **FAN SPEED** will increase or decrease the airflow of the fan. All models have 10 speeds. For speeds 6 to 10, all 5 lights will flash before showing additional LEDs to correspond to the current speed.

Press the fan speed arrows on the remote or hold down the power button on the base to switch between fan speeds 1-10.

Recommended Speeds	1	2	3	4	5	6	7	8	9	10	Boost
Nursery	✓	✓	✓								
Quiet Sleep	✓	✓	✓	✓							
Working From Home	✓	✓	✓	✓	✓						
Watching TV	✓	✓	✓	✓	✓	✓					
Ambient Noise Sleep		✓	✓	✓	✓	✓	✓	✓			
Cooking				✓	✓	✓	✓	✓	✓	✓	
Exercise					✓	✓	✓	✓	✓	✓	✓
Hot Day Cool Down						✓	✓	✓	✓	✓	✓




OSCILLATION

UI Display

45 degrees	●	●	○	●	●
90 degrees	●	○	○	○	●
180 degrees	○	○	○	○	○

 When oscillation is activated, lights will display to indicate the current angle.

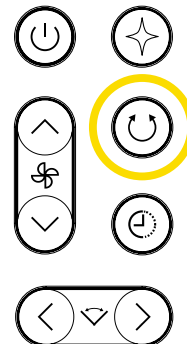

Choose between **OSCILLATION** settings to best suit your needs. To change oscillation settings, press the button to cycle through options on the **REMOTE**. To turn off oscillation, press the oscillation button until no LEDs are illuminated.


TIMER

Choose between **TIMER** settings to best suit your needs. Press the Timer icon on the remote to switch between timer settings of 1-12 hours. The LED lights will indicate how many hours the timer is set for. The lights will switch off after 20 seconds. To check how long is left on the timer, press the Timer icon again and the indicator lights will illuminate again.

UI Display

1 hour	○	●	●	●	●
2 hour	○	○	●	●	●
4 hour	○	○	○	●	●
8 hour	○	○	○	○	●
12 hour	○	○	○	○	○

 The LED lights will indicate the timer interval for 20 seconds, then turn off.

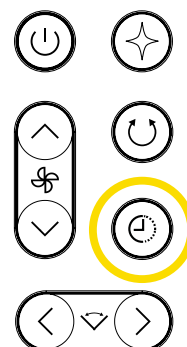


SPECIALTY MODES

Choose between **SPECIALTY MODE** settings to best suit your needs. Press the Specialty Mode icon on the remote to toggle through the available Specialty Modes. To deactivate, change the fan speed by pressing the arrows on the remote or holding down the button on the unit.

For more information on Specialty Modes and indicator lights, see the How-To videos on sharkclean.co.uk.

UI Display

 
Sleep Mode: All lights will flash from right to left.
BreezeBoost Mode: All lights will flash from left to right.
NaturalBreeze Mode: One light will flash from left to right.

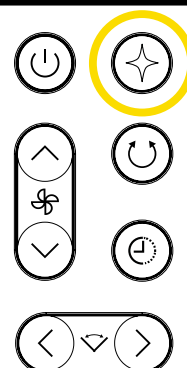

Sleep	Fan will mute chimes, dim lights, and switch to a fan speed optimised for sleep. Sleep Mode will turn off automatically after 8 hours. To deactivate, use the Specialty Mode button and toggle until another mode is selected or switch the unit OFF. When switched OFF and on again, the fan returns back to last used fan setting.
BreezeBoost	Fan will create a high-speed airflow above speed setting 10.
NaturalBreeze	Fan will create varying airflow patterns to simulate natural wind.

HORIZONTAL ANGLE ADJUST



 
You can use the remote control to change the horizontal angle of the fan from a distance. Press the left or right arrows on the remote to adjust the horizontal angle.

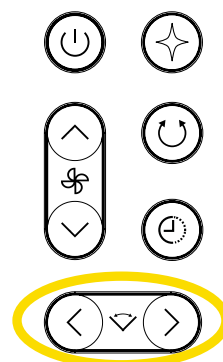

MAINTENANCE

- Unplug the fan before doing any cleaning or maintenance.
- We recommend cleaning the fan every 6 months, or as needed.
- We recommend changing the batteries in the remote control every 12 months, or as needed.

   DUST DEFENCE

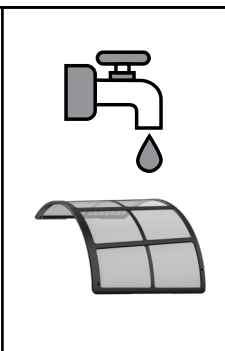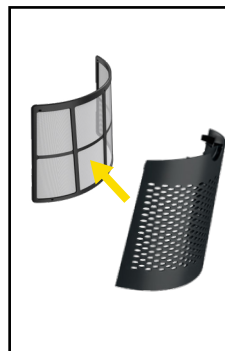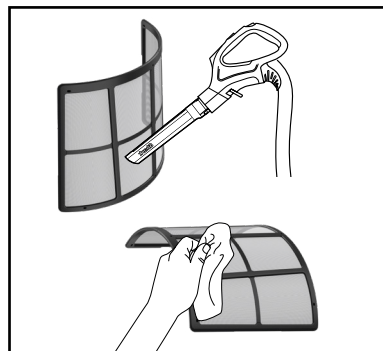

1. Remove the Dust Defence panel from the unit by gently pulling on the finger tab.
Note: the mesh filter does not need to be removed from the Dust Defence panel.

2. Use a vacuum cleaner on low speed with a soft brush attachment OR a cloth/towel to remove debris from the Dust Defence panel and the internal mesh screen.
Do NOT use abrasive chemical cleaners.

 
3. OPTIONAL: If debris is stuck between the mesh filter and the Dust Defence panel, the filter can be removed by gently pulling it out of the tabs on the panel. Rinse the filter and the panel with room-temperature tap water. Allow both the filter and the panel to air-dry for 12 hours before reinstalling. **DO NOT use the fan when the mesh filter is wet.**

DUST DEFENCE (CONTINUED)






4. Replace the Dust Defence panel by inserting the tabs on the bottom of the panel into the indents on the unit and pushing the panel in until it clicks into place.

EXTERNAL CLEANING

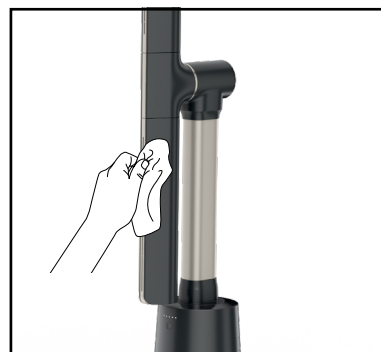

To clean the exterior of the fan, wipe it down with a microfiber cloth dampened with warm, soapy water. To prevent damage, do not use abrasive chemical cleaners or too much water.

   REPLACING THE BATTERIES IN THE REMOTE

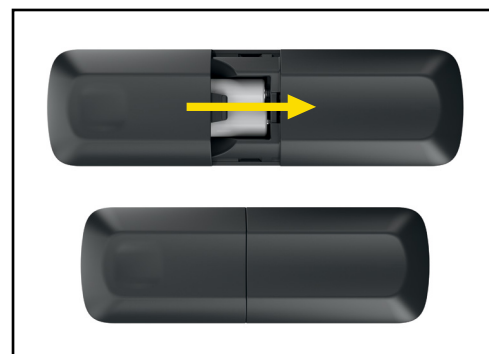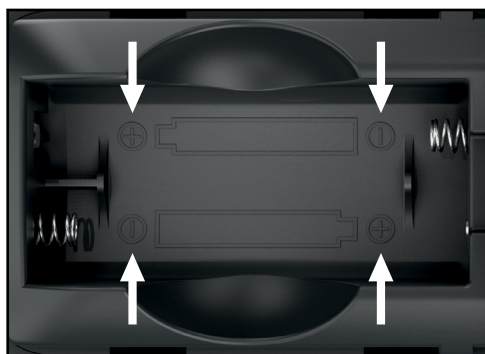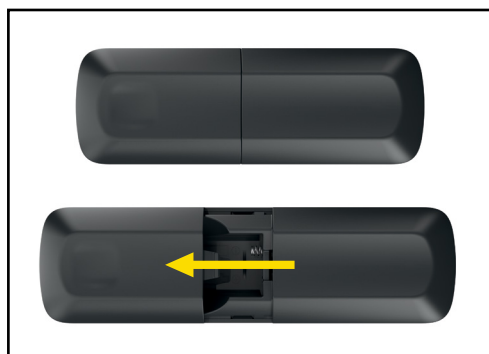

1. To access the batteries, push down gently on the battery door on the back of the remote, then slide the door off. Remove the batteries from the chamber and follow local ordinances for battery disposal.

2. Insert 2 new AAA batteries into the remote. Make sure the batteries are installed in correct orientation as shown in the battery chamber.

3. Slide the battery door back into place on the back of the remote.

TROUBLESHOOTING AND FREQUENTLY ASKED QUESTIONS

GENERAL USE	Why is telescoping not working?	Remove the tape after assembly is complete.
	How can I switch from vertical orientation to horizontal orientation?	To pivot the fan vertically or horizontally, grip one end of the fan blade and move it to the desired location. The fan has 360 degrees of rotation.
UI / SETTINGS	Why is oscillation not working and/or the unit clicking when oscillation is selected?	The fan comes with tape on the pole and the base to help in the assembly process. Remove the tape after assembly is complete. If oscillation is still not working after the tape has been removed, make sure that all assembly touchpoints are correctly assembled. Twist the pole clockwise firmly onto the base until it clicks securely into place to verify that it is installed completely and correctly.
	Where do I put the remote?	Store the remote on the magnetic mount on the top of the pole, on the sticker that shows an outline of the remote.
	Why is my fan changing speeds on its own?	The fan may be in NaturalBreeze Mode, which changes automatically to simulate natural wind. To deactivate a Specialty Mode, press the Fan Speed icon, or the Specialty Mode button in the top right corner of the remote.
	Why is the remote not working?	When using the remote control, make sure it is pointed directly at the LED lights on the front of the fan. If you purchase a replacement remote control, you must pair it with the fan before use. To pair the remote with the fan, hold down the Power button on the fan base for 20 seconds, or until the first and last lights on the display illuminate, then press the Fan Speed Up arrow on the remote. If the remote is not working, you may need to change the batteries. See the Replacing the Batteries in the Remote section for instructions.
	Why is the fan unsteady?	Make sure the fan has been assembled correctly and that all parts have been completely clicked into place. Check the connection points where the pole connects to the base.
	Why are the lights dim?	The fan may be in Sleep Mode, which dims the lights. To deactivate, press the Specialty Mode button in the top right corner of the remote until Sleep Mode is turned off.
	Why did my unit turn off on its own?	Timer Mode may be activated. The timer will turn the fan off after 1 to 12 hours. To turn off the timer, press the ⌚ Timer button until all of the indicator lights are turned off.
	How do I disable beeping and chiming?	Press and hold the ⌚ Timer and ⤴ Oscillation buttons at the same time for 3 seconds to disable chiming. Repeat to reactivate chiming sounds.
MAINTENANCE	How do the indicator lights on the base work?	The 5 lights on the base illuminate in different patterns to indicate the status of available fan functions, including Power, Speed, Oscillation angle, Timer, and Specialty Modes. In all cases, the lights will turn off after 20 seconds.
	How often should I clean the fan and the Dust Defence filter?	We recommend cleaning the fan and the Dust Defence filter every 6 months or as needed.

MANUFACTURER'S GUARANTEE

When a consumer buys a product in the United Kingdom, they get the benefit of legal rights relating to the quality of the product (your "legal rights"). You can enforce your legal rights against your retailer, including Shark if you bought your Shark appliance from sharkclean.co.uk. However, at Shark we are so confident about the quality of our products that we give the owner an additional, free parts and labour manufacturer's guarantee of up to 2 years.

A household appliance like a Shark Fan appliance constitutes a sizeable investment. Your new machine needs to work properly for as long as possible. The guarantee it comes with is an important consideration - and reflects how much confidence the manufacturer has in its product and manufacturing quality.

The manufacturer's guarantee does not affect your legal rights.

How long are new Shark machines guaranteed for?

Our manufacturer's guarantee lasts for one year from the date of purchase as standard, or for two years if you register your purchase with us within 28 days. There is information on how to register below.

How do I register my Shark guarantee?

If you have purchased your Shark Fan appliance directly from sharkclean.co.uk your guarantee is registered automatically. If you bought it from anywhere else, you can register your guarantee online within 28 days of purchase.

- To register online, please visit sharkclean.co.uk/register-guarantee or scan the QR code in your instruction manual.
- Keep a note of the date you purchased the machine.

IMPORTANT:

- **Keep your receipt** if you bought your Shark Fan appliance from anywhere except sharkclean.co.uk. You will need it to claim under your guarantee.

- The free Shark guarantee only applies in the UK.

What are the benefits of registering my free Shark guarantee?

When you register your guarantee, you will get an extra year of cover. We'll also have your details to hand if we ever need to get in touch. If you further agree to receive communications from us, you can also receive tips and advice on how to get the best out of your Shark Fan appliance and hear the latest news about new Shark technology and launches.

What is covered by the free Shark guarantee?

Repair or replacement (at Shark's option) of your Shark machine, including all parts and labour.

What is not covered by the free Shark guarantee?

- Normal wear and tear.
- Accidental damage or faults caused by negligent use or care, misuse, neglect, careless operation or handling of the Shark appliance which is not in accordance with the Shark Operating Manual supplied with your machine.
- Damage caused by use of the Shark appliance for anything other than normal domestic household purposes.
- Damage caused by use of parts not assembled or installed in accordance with the operating instructions.
- Damage caused by use of parts and accessories which are not Shark Genuine Components
- Faulty installation (except where installed by Shark).
- Repairs or alterations carried out by parties other than Shark or its agents.

How can I claim under the free Shark guarantee?

Contact our customer service helpline on 0800 862 0453. For service hours please visit our website. It's free to call, and you'll be put through to a Shark representative. You'll also find online support at support.sharkclean.co.uk.

The Shark representative will go through some troubleshooting with you, and if we conclude that the item has failed, we will send you a replacement part or a returns label to send the defective item back to us free of charge. When you have delivered the defective product to us, we will send you a replacement.

Please remember that the item will need to be boxed when you return it to us, which can be any suitable box; it does not have to be the original packaging.

Where can I buy genuine Shark spares and accessories?

Shark spares and accessories are developed by the same engineers who developed your Shark Fan appliance. You'll find a full range of Shark spares, replacement parts and accessories for all Shark machines at sharkclean.co.uk. Please remember that damage caused by the use of non-Shark spares may not be covered under your guarantee.

IMPORTANT INFORMATION

 
REGISTER YOUR PURCHASE



sharkclean.uk/register-guarantee



Scan QR code using mobile device

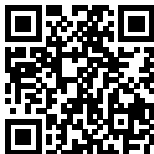

BATTERY REMOVAL AND DISPOSAL

This remote control uses 2 AAA batteries. When the remote batteries no longer have a charge, they should be removed from the remote and recycled. **DO NOT** incinerate or compost the product with its integral battery or the remote batteries. When your remote batteries need to be replaced, dispose of them or recycle them in accordance with local ordinances or regulations.

In some areas, it is illegal to place spent batteries in the trash or in a municipal solid waste stream. Return spent batteries to an authorised recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent batteries.

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 220-240V - 50-60Hz / 3A
Watts: 90W

Benefits of registering your product and creating an account:

- Get easier, faster product support and access to warranty information
- Access troubleshooting and product care instructions
- Be among the first to know about exclusive product promotions

TIP: You can find the model and serial numbers on the QR code label on the base of the fan.



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material sources. To return your used device, please use the return and collection systems or contact the retailer where this product was purchased. They can take this product for environmentally safe recycling.

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

This Owner's Guide is designed to help you get a complete understanding of your new Shark® fan.

SharkNinja Europe Ltd,
1st/2nd Floor Building 3150,
Thorpe Park, Century Way,
Leeds, England, LS15 8ZB
sharkclean.co.uk

SharkNinja Germany GmbH,
Rotfeder-Ring 9,
60327 Frankfurt am Main,
Germany
sharkclean.eu

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

